



CHARGE WARNING LIGHT/BATTERY
 Indicates the charging system is not functioning properly if light comes on while engine is running. Have your vehicle's battery condition and terminals checked by a professional. This light could also indicate a loose, broken or missing alternator belt.

CHECK ENGINE
 A warning light means a detected problem with the car's engine, transmission or emission control system, and alerts the driver about the issue. It usually requires diagnosis with a professional scan tool.

COOLANT TEMP WARNING
 A warning light illuminates on the dashboard if the engine's temperature is too hot. Check coolant level, fan operation, radiator cap and potential coolant leaks.

TRANSMISSION TEMPERATURE
 Means transmission is operating at a higher than optimal temperature (fluid is hotter than normal). Check your vehicle's coolant level and have the system checked by an automotive professional.

LOW OIL PRESSURE
 Don't be confused; this light does NOT indicate low oil level. It indicates low oil PRESSURE is detected. Turn your vehicle off and call a trusted automotive professional.

TPMS (TIRE PRESSURE MONITORING SYSTEM)
 Indicates low tire pressure in one or more tires or that TPMS is not functioning properly. Solid light indicates low tire pressure and air is needed. Flashing warning light means TPMS is not functioning properly and needs to be checked by a professional for diagnosis and repair or replacement.

ABS
 Indicates that the Anti-lock Braking System is not functioning properly. If a malfunction occurs, driving could be dangerous, and the system needs to be inspected by a professional.

LAMP OUT
 This indicator alerts the driver there is an exterior light on the vehicle that is not functioning properly.

BRAKING SYSTEM
 Means one of three possible conditions: parking brake is on, problem with the braking system/brake fluid is low, or ABS malfunctions. If your parking brake is fully released, have your brake fluid level checked. If the problem is with ABS, see a professional for diagnosis.

OIL CHANGE REMINDER
 Indicates oil life has expired, as monitored by the engine control module. The interval can be mileage or a combination of readings taken by the ECM.

AIR BAG
 If the air bag warning light flashes intermittently or remains on during vehicle operation, it's possible the front, side or curtain air bag, or pretensioner system malfunctioned. The vehicle needs immediate service by an automotive professional.

WASHER FLUID REMINDER
 This means washer fluid is low. Fill washer fluid reservoir by looking for the cap with a symbol that looks like a windshield.

VEHICLE WARNING LIGHTS

GET TO KNOW YOUR DASHBOARD LIGHTS

